 


# Honeywell

## OWNER'S MANUAL

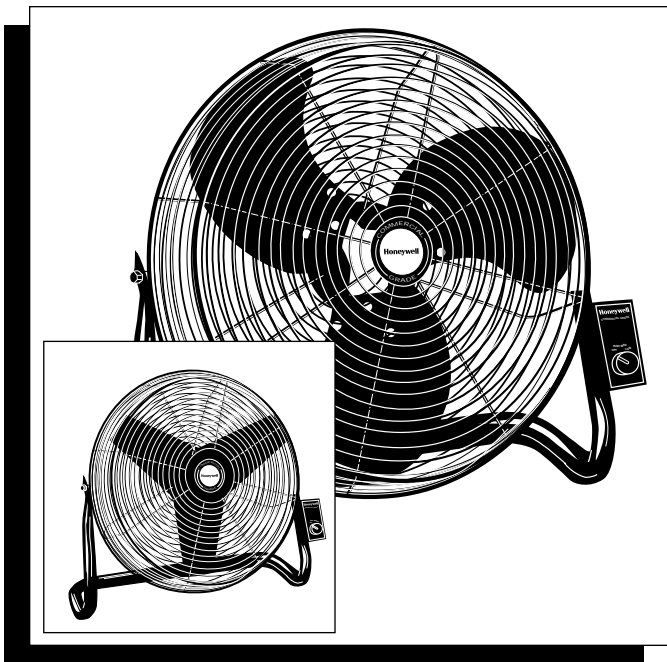

COMMERCIAL GRADE  
HIGH VELOCITY FAN

Model HV-140-/HV-180

# INSTRUCTIONS FOR USE AND CARE

---

## **READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS BEFORE USING THIS FAN.**

**When using electrical appliances, basic safety precautions should always be followed, including the following:**

- Use this fan only as described in this manual. Other use not recommended may cause fire, electric shock or injury.
- This product is intended for household, industrial and commercial use ONLY. It is not intended for outside use.
- High Velocity fans are designed to create rapid air movement; therefore, make sure the fan is not placed near drapes, curtains, or any objects that may be drawn into the fan inlet.
- This fan requires a grounded 120 Volt power source (3 prong receptacles). NEVER connect the fan to any power source other than a 120 volt alternating current polarized outlet.
- To protect against electrical shock, do not place fan in window, immerse unit, plug or cord in water or spray with liquids.
- This fan is equipped with a polarized alternating current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact an electrician to replace the obsolete outlet. Do not defeat the safety purpose of the polarized plug.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug the fan from the outlet when not in use, when moving fan from one location to another and before cleaning.
- Do not operate the fan in the presence of explosive and/or flammable fumes.
- Do not place the fan or any parts near an open flame, cooking or other heating appliance.
- Do not operate the fan with a damaged cord, plug, after a malfunction or if dropped or damaged in any manner. (See warranty.)
- Avoid contact with moving fan parts.
- To disconnect, grip the plug and pull it from the wall outlet. Never yank the cord.
- The use of attachments not recommended by Honeywell Consumer Products may be hazardous.
- Always use on a dry, level surface.
- Do not hang or mount fan on a wall or ceiling.
- Do not operate if the fan housing is removed or damaged.
- Do not operate without fan grilles properly in place.
- A loose fit between the AC outlet and plug may cause overheating of the plug. Have a qualified electrician replace the outlet.

**WARNING: To reduce the risk of fire or electrical shock, do not use this fan with any solid state speed control device.**

# ASSEMBLY INSTRUCTIONS

 
- Remove the packaging material from the Fan Control Box.

- Remove the holding screw from the rear of the Fan Control Box (Fig. 1).

- Push the Fan Control Box Extension through the opening in the right leg of the fan base (Fig. 1).

- Replace the holding screw and firmly tighten the Fan Control Box onto the base (Fig. 1).

**NOTE: When installing the Control Box, make sure the electrical wires are located on the outside of the base (Fig. 1).**

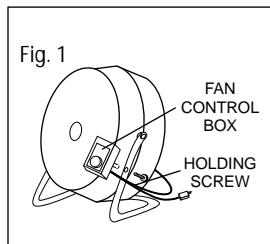

## OPERATION

- Set your fan on a level, dry surface.

- Plug the power cord into a polarized 120 volt AC wall outlet.

- Select the desired

speed for your needs. For maximum air circulation, you may point the fan towards the ceiling. Using this method during the summer and winter will move the warm air from the ceiling, dispers-

ing it and giving you a more uniform room temperature.

- Adjust the pivoting head to direct the powerful breeze where desired.

## CLEANING AND STORAGE

- Turn the Control to OFF and UNPLUG THE FAN BEFORE CLEANING.

- Use only a soft, damp cloth to clean the fan.

- DO NOT immerse the fan in water and never allow water to drip into the Motor Housing.

- DO NOT use gasoline,

 
paint thinner or other chemicals to clean the fan.

- To clean the Fan Blade, use 2 screwdrivers to disengage the 8 hooks holding the Front Grille to the Rear Grille (Fig. 2).

- Remove the Front Grille.

- Wipe the Blade and Grilles.

- Reassemble the fan by snapping the Front Grille into place.

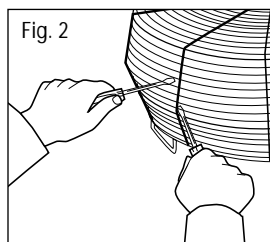

## CUSTOMER RELATIONS/REPLACEMENT PARTS

---

To speak with a technical representative, or place an order, please call our Consumer Relations Center, toll-free, at : 1-800-332-1110. Our technical representatives are available to assist you weekdays from 8:00 am to 10 pm and weekends from 8:30 am to 5:00 pm EST. Orders may be placed 24 hours a day, seven days a week with Master Card, Visa or Discover.

Item	Part no.	Part no.	Price
Fan Blade	HV-140-1	HV-180-1	\$ 15.00
Control Box Holding Screw	HV-140-2	HV-180-2	\$ 4.00
Rubber Feet	HV-140-3	HV-180-3	\$ 3.00
Front Grille	HV-140-4	HV-180-4	\$ 10.00
Fan Stand	HV-140-5	HV-180-5	\$ 15.00

To order by mail, please include \$4.50 for shipping and handling and make check or money order payable to Honeywell Consumer Products Business. Massachusetts residents add 5% sales tax. Mail to:

Consumer Relations  
Honeywell Consumer Products Business  
250 Turnpike Road  
Southborough, MA 01772

Note: Honeywell Consumer Products Business can not ship to P.O. Box numbers

### **HV-140/HV-180 Commercial Grade High Velocity Fan.**

This product has been engineered and crafted with great care for your status faction.

You should first read all instructions before attempting to use this product.

**The enclosed Customer Response card should be filled out and returned within 7 days of purchase.**

A. This 5 year limited warranty applies to repair or replacement of product found to be defective in material or workmanship during the warranty period. This warranty does not apply to damage resulting from abusive, unreasonable use or supplemental damage. Defects that are the result of normal wear and tear will not be considered manufacturing defects under this warranty. You should first read the instruction manual before attempting to use this product. THE

MANUFACTURER IS NOT LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE. Any implied warranty of merchantability or fitness for a particular purpose on this product is limited in duration to the duration of this warranty. Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you also may have other rights which vary from jurisdiction to jurisdiction. This warranty applies only to the original purchaser of this product.

B. At its option, the manufacturer will repair or replace this product if it is found to be defective in material or workmanship within the warranty period. Defective product should be returned to the place of purchase in accordance with store

policy. Thereafter, while within the warranty period, any defective product should be returned to the manufacturer.

C. This warranty does not cover damage resulting from any unauthorized attempts to repair or from any use not in accordance with this manual.

D. Return defective product, freight paid with proof of purchase and \$10 for handling, return packing and shipping charges, to manufacturer:  
Attn: Repair Department  
South Point Distribution Center  
4755 South Point Drive  
Memphis TN 38118 USA